


PRF Vertical Mouse Wireless

User manual

Guide d'utilisation

Gebrauchsanweisung

Gebruiksaanwijzing

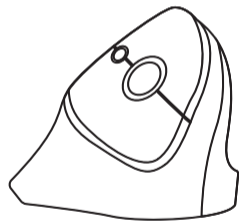

Package contents



 
PRF Mouse




AA battery



USB receiver




USB-C adapter

 


User manual


1

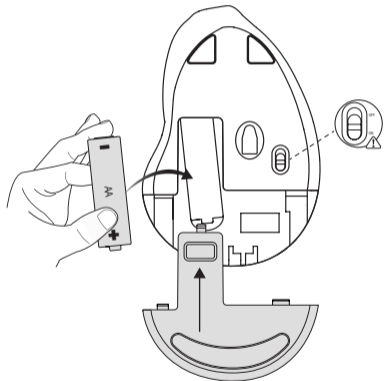

2

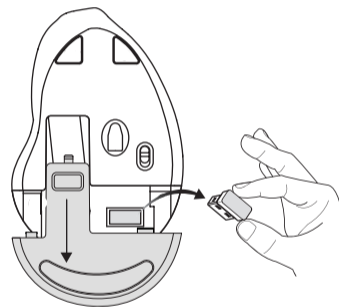

3

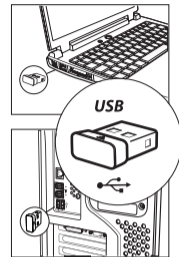

or




&



Product information



Buttons

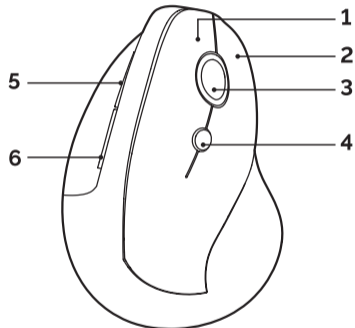

EN

1. Left button
2. Right button
3. Scroll button
4. DPI button
5. Forward button
6. Backward button

DE

1. Linke Taste
2. Rechte Taste
3. Scrollrad
4. DPI Knopf
5. Vorwärtsknopf
6. Rückwärtsknopf

FR

1. Click gauche
2. Click droit
3. Roulette de défilement
4. Réglage DPI
5. Bouton "avancer"
6. Bouton de retour en arrière

NL

1. Linker muisknop
2. Rechter muisknop
3. Scrollwiel
4. DPI knop
5. Knop vooruit
6. Knop achteruit

EN

At end of life, the resources used in this device can be recycled if it is disposed with electronic waste.

DE

Am Ende der Lebensdauer können die in diesem Gerät verwendeten Ressourcen recycelt werden, wenn diese in dem Elektronikmüll entsorgt werden.

FR

En fin de vie, les matières premières de cet appareil peuvent être recyclées dans les déchets électriques.

NL

Aan het einde van de levensduur kunnen de grondstoffen in dit apparaat worden gerecycled bij het elektrisch afval.



Made in China

