



Information about the MonLines MEF001 remote control

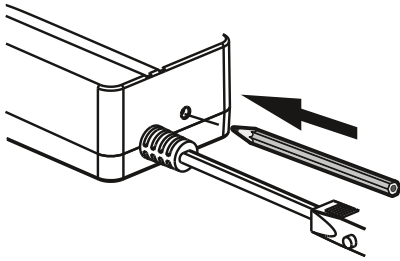

1. Connection of remote control and control unit

- 1.1 When the TV Lift is switched on, press the small button on the control unit using a small tool. A beep signals that the control unit is ready for programming.
- 1.2 Press and hold the 'SET' button on the remote control for about 10 seconds to set the remote control. The process is accompanied by beeps. A long beep at the end of the process indicates that the programming is complete.

Decoupling the remote control: If you want to connect a replacement remote control, you must first delete the existing data. Press the small button on the control unit. You will hear a beep. Press and hold the button for about 5 seconds. Another beep signals the completion of the deletion process.

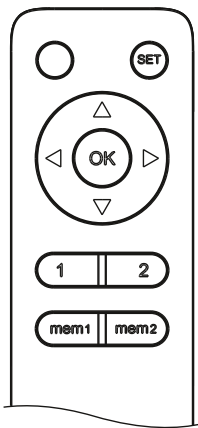

2. Functions

- 2.1 **Extend / retract function:**
Press and hold the 'Up' or 'Down' arrow button to move the TV Lift up or down.
- 2.2 **Position memory function:** Press and hold 'mem1' or 'mem2' for approx. 3 seconds until you hear a signal tone. The current position is now saved. Different positions can be saved on 'mem1' and 'mem2'.
- 2.3 **Recall memory:**
If you press the '1' or '2' button, the TV Lift automatically moves to the position saved on the 'mem1' or 'mem2' buttons.
- 2.4 **Setting the height limit**
Press 'mem1' 5 times in quick succession. You will hear a beep each time you press the button, the 5th press is confirmed by 2 beeps. The current position is now saved as the height limit.
- 2.5 **Standard position:** If you briefly press and hold the 'OK' button, the TV Lift automatically moves to the lowest position. Press the 'OK' button again to stop.
- 2.6 **Reset mode:**
Press and hold the 'OK' button for about 3 seconds until you hear a beep. The TV Lift moves to the lowest position, then moves up a little and stops automatically. If you hear 2 beeps, the system is reset.

Please note: The remote control is powered by 2 AAA batteries (not included).