

General hazard information:

- The screws for mounting the TV must not be too long, otherwise the TV could be damaged inside.
- Please ensure that the cables are not damaged during installation. Damaged cables must be replaced immediately to avoid short circuits.
- Screws must always be screwed in straight way. Please do not damage the threads of the screws, otherwise the stability of the product cannot be guaranteed.
- Observe the weight limit of the respective TV mount as specified:
www.wissmann-raumobjekte.de
- TV mounts are not suitable as children's toys (damage to the product and risk of injury can be the result of improper handling)
- Claims for damage or possible warranty claims due to incorrect installation or incorrect handling cannot be made to the manufacturer.
- **Products made of glass:** observe the weight limit at
www.wissmann-raumobjekte.de.
Caution, glass is brittle and splinters if tilted. Always place on soft surfaces. Broken or splintered glass is a risk of accidents and should therefore be disposed of immediately.
- **TV mounts with wheels:** replace stiff wheels to avoid damage to soft wooden floors.
- **TV mounts with a rotating function:** To prevent damage to the cables due to tension, insert them loosely so that the cables are not pulled too tightly when the TV is rotated. To avoid chafing of the cables, use the spiral cover as cable protection at the cable entry.
- **TV mounts with a rotating function:** If a rotation axis is stiff (TV can hardly be rotated or cannot be rotated at all), please stop using the product and contact the manufacturer immediately: info@wissmann-raumobjekte.de
- **TV mounts for wall mounting:** our dowels are not suitable for all types of walls. Therefore, only use dowels suitable for your wall.
- **TV mounts for wall mounting:** If the wall holes were drilled too large, be sure to use larger dowels or alternatively adhesive dowels.
- **TV mounts for wall mounting:** The load-bearing capacity of the wall must be ensured by the user (the upper screws of the wall bracket bear the weight of the TV under tensile load)

Installation instructions: tripod art130

Before starting the installation please read these instructions and follow step by step.

Assembly of the TV-stand

- 1) Place the three legs into the black centre cross.



Note: at the back leg, the upper opening should face forwards and the lower opening face backwards (cable access).

Note: The upper edge of the upper opening fits precisely with the jack on the centre cross.



- 2) Now fasten the legs with the two small screws.



- 3) Stand the TV stand up and check that the centre cross is mounted completely horizontally from front to back and from left to right. Check with a spirit level if necessary and, if required, fine tune the height of the individual legs.
- 4) Mount the vertical TV strut to the centre cross



Installing the DVD board


- 5) Place the screws through the vertical slot on the centre cross and screw on the DVD board from the back (Use washers and cap nuts).



- 6) The DVD player cables run upwards through the vertical column on the DVD board.

III.) Installing the flatscreen TV

- 7) Install the flat struts horizontal to the rear of your TV by using 4 of the 8 washers (the 4 headless screws of the struts have to show away from the TV).
- 8) Info: Due to the length of the TV installation struts, the TV can be moved horizontally to the best position.

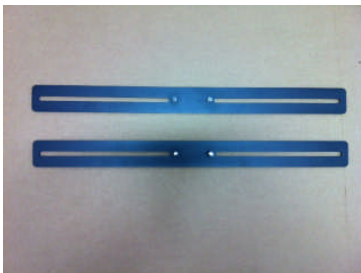

Note: The installation of the flat horizontal struts has to be done by using the screws provided with your television. If these screws are too short, they'll have to be replaced by longer ones.

Note: Please check, that the longer screws are not too long. – If the screws touch the TV inside, the TV could be damaged. NEVER use screws which are too long.

Note: for your support, we included 8 x M6 and M8 screws (max. 4 of these screws will be needed).

Note: if the cables have to be plugged into the TV behind the lower horizontal strut, please either do not use this strut or use the black plastic distance elements.

- 9) The 4 screws of the horizontal struts at the rear of the TV have now to be inserted in the vertical strut (two people should hold the TV). Adjust the TV to the position required (would help, if a third person can check that from a distance) and then screw it tight at the rear using washers and the 4 M8 nuts. Hide the nuts by using the black plastic covers.
- 10) Insert the cabling into the cross and from there into the back column routing it vertically down to the floor.
Note: If brackets are used for a soundbar, they must first be mounted on the lower flat profile (see assembly instructions).

Note:

If the installation of your TV is not possible even by using one of our accessory kits, please contact us by sending a photo of the TV's backside:

info@wissmann-raumobjekte.de

We will find a solution immediately.

Final information:

This TV mount is produced in finely brushed stainless steel. Stainless steel surfaces are sensitive for fingerprints. We did a special surface protection and recommend to renew that every few months to avoid spots of fingerprints (a small bottle "Chromol" to renew the surface protection is added)