

General hazard information:

- The screws for mounting the TV must not be too long, otherwise the TV could be damaged inside.
- Please ensure that the cables are not damaged during installation. Damaged cables must be replaced immediately to avoid short circuits.
- Screws must always be screwed in straight way. Please do not damage the threads of the screws, otherwise the stability of the product cannot be guaranteed.
- Observe the weight limit of the respective TV mount as specified:
www.wissmann-raumobjekte.de
- TV mounts are not suitable as children's toys (damage to the product and risk of injury can be the result of improper handling)
- Claims for damage or possible warranty claims due to incorrect installation or incorrect handling cannot be made to the manufacturer.
- **Products made of glass:** observe the weight limit at
www.wissmann-raumobjekte.de.
Caution, glass is brittle and splinters if tilted. Always place on soft surfaces. Broken or splintered glass is a risk of accidents and should therefore be disposed of immediately.
- **TV mounts with wheels:** replace stiff wheels to avoid damage to soft wooden floors.
- **TV mounts with a rotating function:** To prevent damage to the cables due to tension, insert them loosely so that the cables are not pulled too tightly when the TV is rotated. To avoid chafing of the cables, use the spiral cover as cable protection at the cable entry.
- **TV mounts with a rotating function:** If a rotation axis is stiff (TV can hardly be rotated or cannot be rotated at all), please stop using the product and contact the manufacturer immediately: info@wissmann-raumobjekte.de
- **TV mounts for wall mounting:** our dowels are not suitable for all types of walls. Therefore, only use dowels suitable for your wall.
- **TV mounts for wall mounting:** If the wall holes were drilled too large, be sure to use larger dowels or alternatively adhesive dowels.
- **TV mounts for wall mounting:** The load-bearing capacity of the wall must be ensured by the user (the upper screws of the wall bracket bear the weight of the TV under tensile load)
- **Cable for model art115:** to prevent heat build-up and fire hazards inside the lower box, please use cables and plugs certified according to regulations. Please do not store batteries, chargers or power supplies in the lower box.

Flatscreen mount move “art115” Assembly instructions

 
Before starting the assembly please read these instructions and follow step by step.

I.) TV-stand assembly


- 1) De-install the black lower block with casters out off the box



- 2) Install the plate to the box. The strut for cable what is mounted to the plate has to face in direction of the two holes of the box. Put the screws of the plate into the box. For easy installation lay the plate onto the cardboard box.

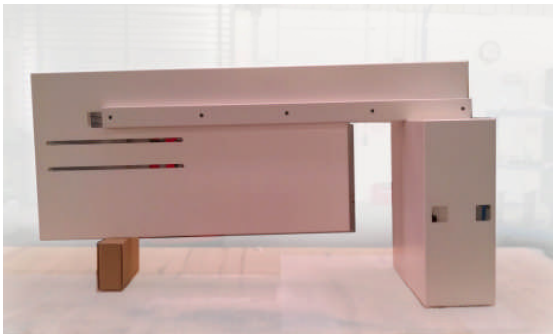


 - 3) Screw the plate to the box by using the nuts and washers.

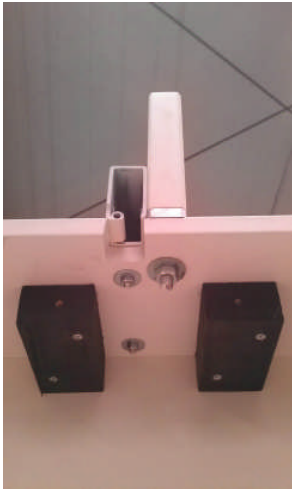

II.) Installation of the flat screen TV

 - 1) Install the flat struts horizontally to the rear of your TV by using 4 of the 8 washers (the 4 headless screws of the struts have to show away from the TV).
- 2) In very rare cases, TV have a Vesa Norm of 600 mm. In this case, please contact us. We will send a 720 mm strut to replace the 450 mm strut.

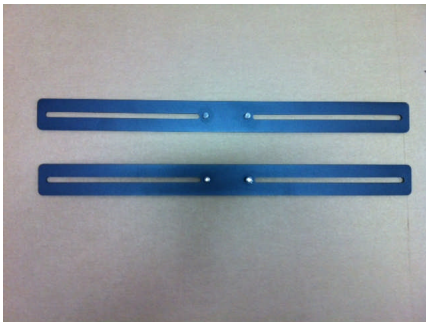

Note: The installation of the flat horizontal struts has to be done by using the screws provided with your television. If these screws are too short, they'll have to be replaced by longer ones.

Note: Please check, that the longer screws are not too long. – If the screws touch the TV inside, the TV could be damaged. NEVER use screws which are too long.

Note: for your support, we included 8 x M6 and M8 screws (max. 4 of these screws will be needed).

Note: if the cables have to be plugged into the TV behind the lower horizontal strut, please either do not use this strut or use the black plastic distance elements.

- 3) The 4 screws of the horizontal struts at the rear of the TV have now to be inserted in the vertical strut (two people should hold the TV). Adjust the TV to the position required (would help, if a third person can check that from a distance) and then screw it tight at the rear using washers and the 4 M8 nuts. Hide the nuts by using the black plastic covers.

III.) Leading the cables

- 4) Tilt the whole device. Use a thick pillow to lay the TV upon.
- 5) Lead the screen cabling through the profile at the back of the plate and the notch in the box.
- 6) All cables and sockets now can be added into the box. (invisible cable-management)
- 7) Lead cables of the DVD Player into the box through the upper and out of the box through the lower port.
- 8) Put the lower plate (with casters) again into the box and tighten it with the 3 screws.
- 9) **IMPORTANT: tighten the small strut as a connection between plate and block. This is VERY important for the stability.**



- 10) Raise the TV-holder in it's stand position

Note:

If the installation of your TV is not possible even by using one of our accessory kits, please contact us by sending a photo of the TV's backside:

info@wissmann-raumobjekte.de

We will find a solution immediately.