

General hazard information:

- The screws for mounting the TV must not be too long, otherwise the TV could be damaged inside.
- Please ensure that the cables are not damaged during installation. Damaged cables must be replaced immediately to avoid short circuits.
- Screws must always be screwed in straight way. Please do not damage the threads of the screws, otherwise the stability of the product cannot be guaranteed.
- Observe the weight limit of the respective TV mount as specified:
www.wissmann-raumobjekte.de
- TV mounts are not suitable as children's toys (damage to the product and risk of injury can be the result of improper handling)
- Claims for damage or possible warranty claims due to incorrect installation or incorrect handling cannot be made to the manufacturer.
- **Products made of glass:** observe the weight limit at
www.wissmann-raumobjekte.de.
Caution, glass is brittle and splinters if tilted. Always place on soft surfaces. Broken or splintered glass is a risk of accidents and should therefore be disposed of immediately.
- **TV mounts with wheels:** replace stiff wheels to avoid damage to soft wooden floors.
- **TV mounts with a rotating function:** To prevent damage to the cables due to tension, insert them loosely so that the cables are not pulled too tightly when the TV is rotated. To avoid chafing of the cables, use the spiral cover as cable protection at the cable entry.
- **TV mounts with a rotating function:** If a rotation axis is stiff (TV can hardly be rotated or cannot be rotated at all), please stop using the product and contact the manufacturer immediately: info@wissmann-raumobjekte.de
- **TV mounts for wall mounting:** our dowels are not suitable for all types of walls. Therefore, only use dowels suitable for your wall.
- **TV mounts for wall mounting:** If the wall holes were drilled too large, be sure to use larger dowels or alternatively adhesive dowels.
- **TV mounts for wall mounting:** The load-bearing capacity of the wall must be ensured by the user (the upper screws of the wall bracket bear the weight of the TV under tensile load)

Installation instructions: TV-mount solution art121

I.) Wall installation

Important note: please read no. 5) below exactly. New screws have to be used.

- 1) Determining the height of the TV-mount: Position the TV-holder vertically at the desired location to the wall and mark the drilling holes for the wall brackets.
- 2) Remove the upper and lower bracket-screw and the wall-bracket from the TV mount **(don't use these screws any more!)**
- 3) For fixing the product to concrete, solid brick or sand-lime brick walls, use a 10 mm drill bit to drill the holes in a depth of 80 mm into the wall and insert the 8 wall dowels provided.

Note: The provided dowels and screws are for concrete, solid brick and sand-lime brick walls.

Note: The provided dowels cannot be used for walls made out of wood or plasterboard. For aerated concrete or perforated bricks you need to stay in the dowel's load limit.

Please make sure whether the wall is strong enough to take the load of a flatscreen TV and please make sure to take the right dowels for your wall (please pay attention to description below)

Note: the drills for the dowels have to have the right size! If these drills are too big, it could cause a negative effect to the stability of the TV-mount.

The dowels must tightly fit into the holes in the wall.

If necessary use 2K adhesive system for the dowels.

Most of the stress (tensile-load) is on the upper dowels and screws when the TV is swiveled forward 90°.

Load for the upper screws (approximate):

- | | |
|---------------|--|
| 121-1: | 4 upper screws, tensile load 20% of the TV's weight (per screw) |
| 121-2: | 2 + 2 upper screws, tensile load 35% of the TV's weight (per screw) |
| 121-3: | 2 + 2 upper screws, tensile load 35% of the TV's weight (per screw) |


The provided dowels are not suitable for all wall materials.

UX 10 x 60 can be used with tension between 500 and 1,000 N (check table below). If necessary please use 2K adhesive system for the dowels.

Loads									
Universal plug UX									
Highest recommended loads ¹⁾ for a single anchor. The given loads are valid for wood screws with the specified diameter.									
Type		UX 5 x 30	UX 6 x 35	UX 6 x 50	UX 8 x 40 UX 8 x 50	UX 10 x 60	UX 12 x 70	UX 14 x 75	
Wood screw diameter	[mm]	4	5	5	6	8	10	12	
Recommended loads in the respective base material F _{rec} ²⁾									
Concrete	≥ C20/25	[kN]	0.30	0.40	0.60	0.60	1.00	1.50	1.80
Solid brick	≥ Mz 12	[kN]	0.20	0.20	0.30	0.30	0.50	0.70	0.80
Perforated sand-lime brick	≥ KSL 12	[kN]	0.30	0.40	0.40	0.50	0.60	0.80	0.80
Vertically perforated brick	≥ Hz 12	[kN]	0.20	0.20	0.20	0.20	0.20	0.30	0.40
Aerated concrete	≥ AAC 4 (G4)	[kN]	0.15	0.20	0.20	0.30	0.40	0.60	0.70
Gypsum plasterboard	12.5 mm	[kN]	0.10	0.10	0.10	0.10	-	-	-
Gypsum plasterboard	25 mm	[kN]	0.10	0.15	0.15	0.15	-	-	-
Gypsum fibreboard	(Fermacell)	[kN]	0.20	0.20	0.20	0.20	-	-	-
Gypsum block	ρ ≥ 0.9 kg/dm ³	[kN]	-	-	-	0.15	0.35	0.45	0.50

¹⁾ Required safety factors are considered.
²⁾ Valid for tensile load, shear load and oblique load under any angle.

Producer-information about dowels UX10 x 60:

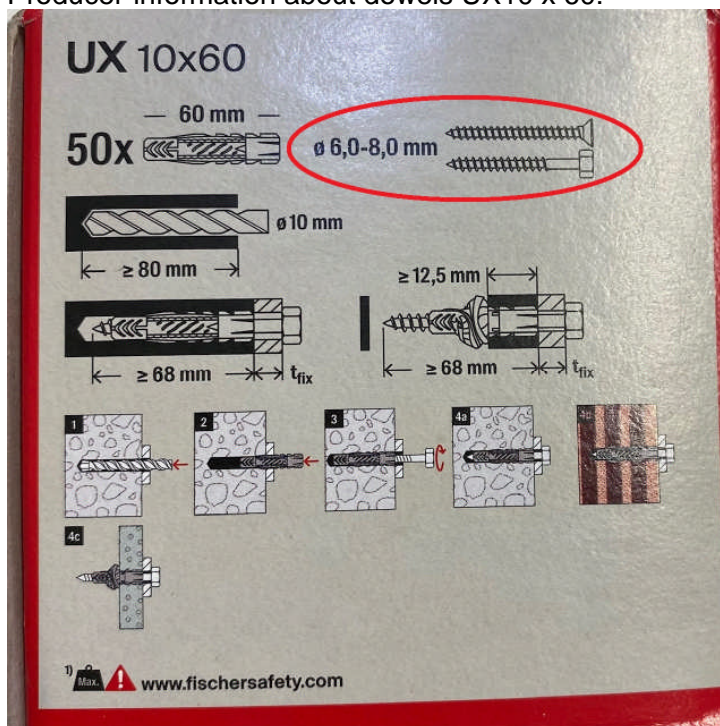

For more dowel information: www.fischersafety.com


- 4) Mount the brackets onto the wall using dowels and the long screws provided (6 x 80mm)
- 5) Mount the TV-mount between the two brackets (tighten screws hand-tight).
Note: Do not forget the brass washer between the TV-holder and the brackets.

Please use the new countersunk screw (with grey coating) when mounting the vertical column in between the two wallbrackets

Note: the screws are coated with a special material to fix them in their position.
(If the product is difficult to swivel, then lower the screws slightly)

II.) Installing the TV to the mount

- 1) Install the flat struts horizontal to the rear of your TV by using 4 of the 8 washers (the 4 headless screws of the struts have to show away from the TV).
- 2) Info: Due to the length of the TV installation struts, the TV can be moved horizontally to the best position.

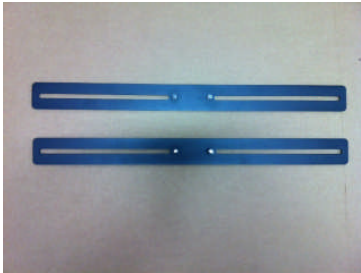

Note: The installation of the flat horizontal struts has to be done by using the screws provided with your television. If these screws are too short, they'll have to be replaced by longer ones.

Note: Please check, that the longer screws are not too long. – If the screws touch the TV inside, the TV could be damaged. NEVER use screws which are too long.

Note: for your support, we included 8 x M6 and M8 screws (max. 4 of these screws will be needed).

Note: if the cables have to be plugged into the TV behind the lower horizontal strut, please either do not use this strut or use the black plastic distance elements.

- 3) The 4 screws of the horizontal struts at the rear of the TV have now to be inserted in the vertical strut (two people should hold the TV). Adjust the TV to the position required (would help, if a third person can check that from a distance) and then screw it tight at the rear using washers and the 4 M8 nuts. Hide the nuts by using the black plastic covers.
- 4) To hide the cables route them through the lower arm and lead them downwards inside the column. Please use the spiral cover for cable protection.

Note: If your flatscreen is not always in a perfect horizontal look while swivelling, this could cause due to a wrong drill size (dowels may can move in the wall).

To avoid this, please put some 2K adhesive around the dowels.

Note:

If the installation of your TV is not possible even by using one of our accessory kits, please contact us by sending a photo of the TV's backside:

info@wissmann-raumobjekte.de

We will find a solution immediately.