



LX HD Sit-Stand Wall Mount LCD Arm



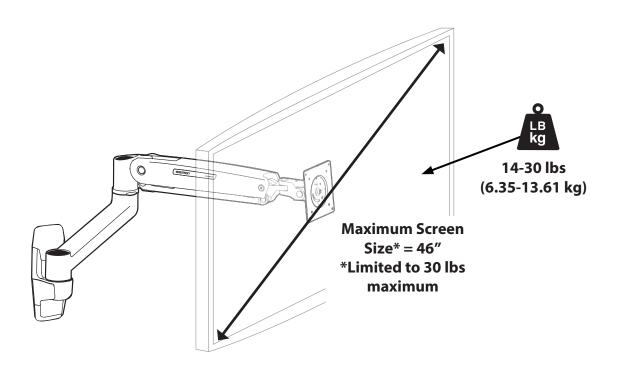

For the latest User Installation Guide please visit: www.ergotron.com

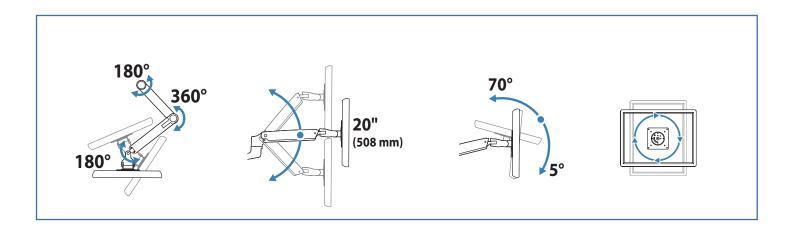

User's Guide - English Guía del usuario - Español Manuel de l'utilisateur - Français Gebruikersgids - Deutsch Benutzerhandbuch - Nederlands Guida per l'utente - Italiano Användarhandbok - svenska ユーザーガイド: 日本語


用户指南 : 汉语





Important! You will need to adjust this product after installation is complete. Make sure all your equipment is properly installed on the product before attempting adjustments. This product should move smoothly and easily through the full range of motion and stay where you set it. If movements are too easy or difficult or if product does not stay in desired positions, follow the adjustment instructions to create smooth and easy movements. Depending on your product and the adjustment, it may take many turns to notice a difference. Any time equipment is added or removed from this product, resulting in a change in the weight of the mounted load, you should repeat these adjustment steps to ensure safe and optimum operation.

Tools Needed

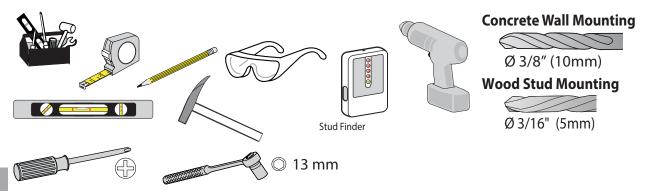


Components

	<u> </u>			
3	Α	В	С	D
1	1x 1x	1x		4x 6 4x M5 x 7mm
2	1x	1x		4x 10-24 x 1/2"
3	2x	4x M4 x 10mm	4x M4 x 10mm	2x
4	1/8"	1 X (3) M3 x 6mm	1x 1x	2x
5	2x M8	2x M8 x 80mm	4mm 5mm	M8 M5 Kit 4x M5x20mm
6	4x 4x M4x12mm M5x12i	M6x12mm	2x	4x M8-M5 Reducer


Mounting Height for Ergonomic Workstation


This mounting height is a recommendation for an ergonomic workstation that accommodates user heights of 5'4"-5'9" (163-175cm).

If user heights are different than this, you should change mounting height to accommodate user heights. (Change mounting height one inch for every one inch difference in user heights).

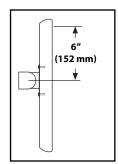


Mounting height assumes there is a 6" (152 mm) distance between the center of your monitor mounting holes and the top of the screen. If your distance is smaller, you should increase mounting height accordingly, if your distance is larger, you should decrease your mounting height accordingly.

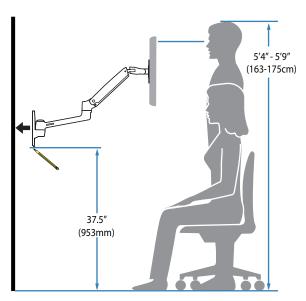

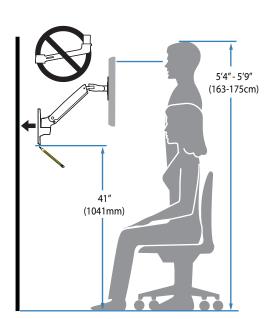



Determine mounting location:


Front view with arm pushed back against the wall.

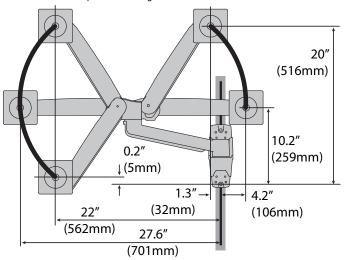


Top view showing range of motion when pulled out from the wall.

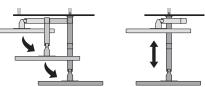

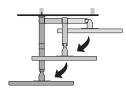

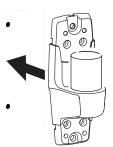

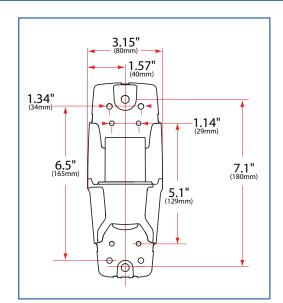




WARNING: Ensure that the wall structure is capable of supporting four times the total weight of mounted equipment. Mounting to wall surfaces that do not meet this criteria may result in an unstable, unsafe condition which could lead to personal injury and/or property damage. Consult a construction professional if you have any doubt about what this means in regard to your particular application.




CAUTION: Make sure the wall mount bracket is level, flush and snug to the wall surface. DO NOT OVERTIGHT-EN THE BOLTS.

Ergotron product

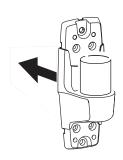




Wood

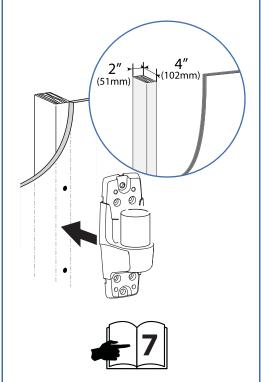


Concrete

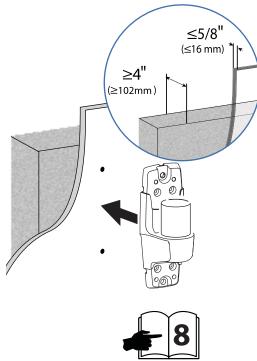



NOTE: Wall Track and Brackets sold separately.





NOTE: Fasteners may unwind due to vibration caused by movement of mounting solution over time. Inspect mounting solution for loose fasteners on a routine basis. If desired, apply a light duty thread locking adhesive to fasteners before installation to prevent back-out.

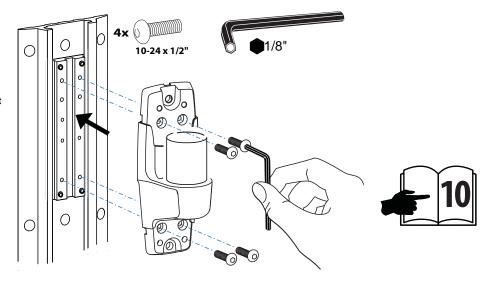

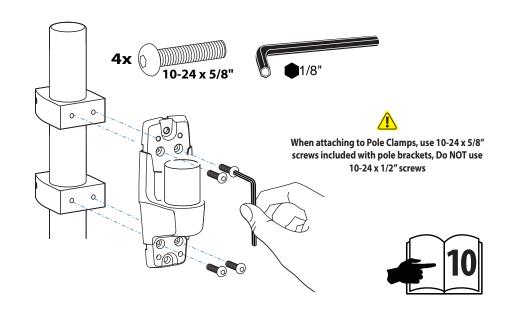


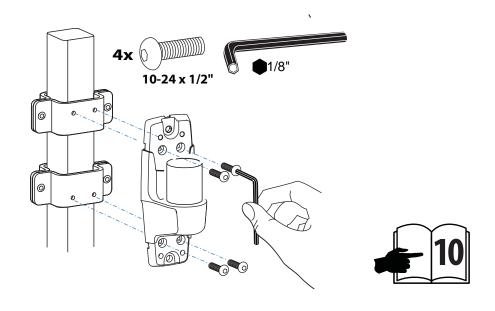


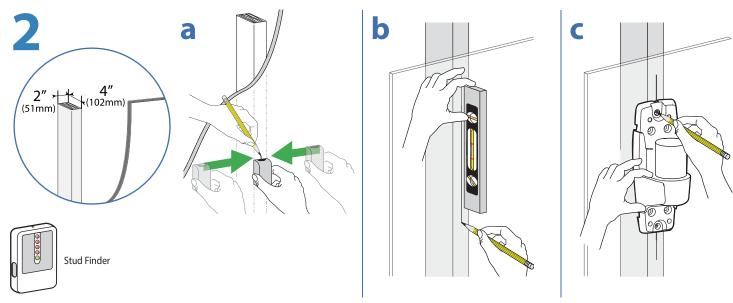


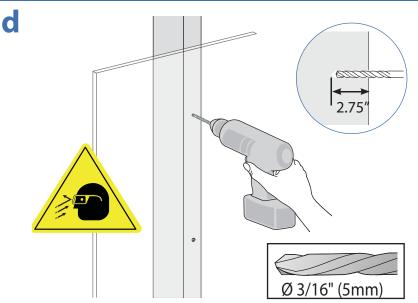

Optional locking feature (customer supplied lock)

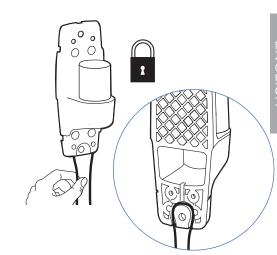

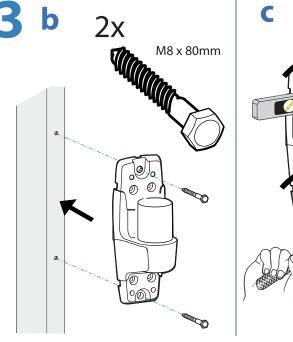

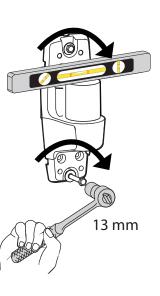


<u>(i)</u>

CAUTION: Make sure the wall mount bracket is level, flush and snug to the wall surface.

DO NOT OVERTIGHTEN THE BOLTS.



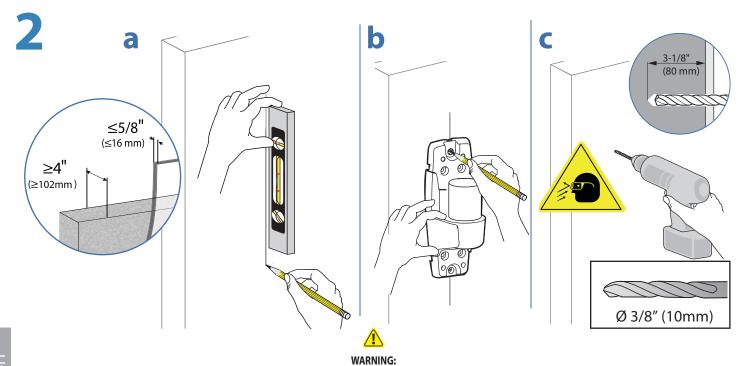


Mounting holes must be at least 3-1/8" (80mm) deep and must be located within solid concrete, not mortar or covering material. If you drill into an area of concrete that is not solid, reposition mounting holes until both anchors can be fully inserted into solid concrete!





WARNING:


Anchors that are not fully set in solid concrete will not support the applied load resulting in an unstable, unsafe condition which could lead to personal injury and/or property damage. Consult a construction professional if you have any doubt about what this means in regard to your particular situation.

3

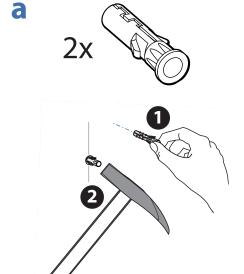


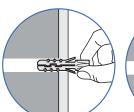


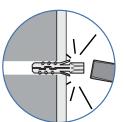


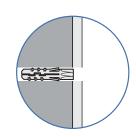




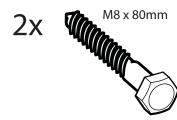

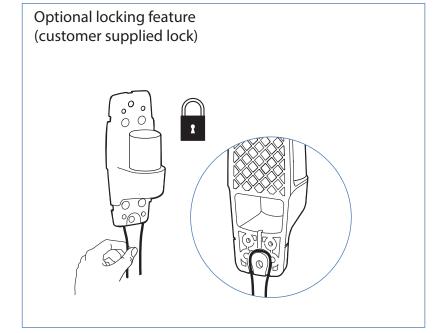

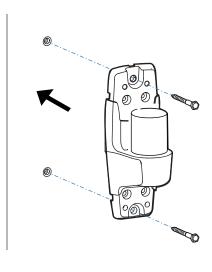

C

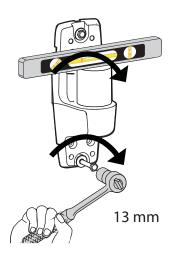




CAUTION: Make sure the wall mount bracket is level, flush and snug to the wall surface.

DO NOT OVERTIGHTEN THE BOLTS.



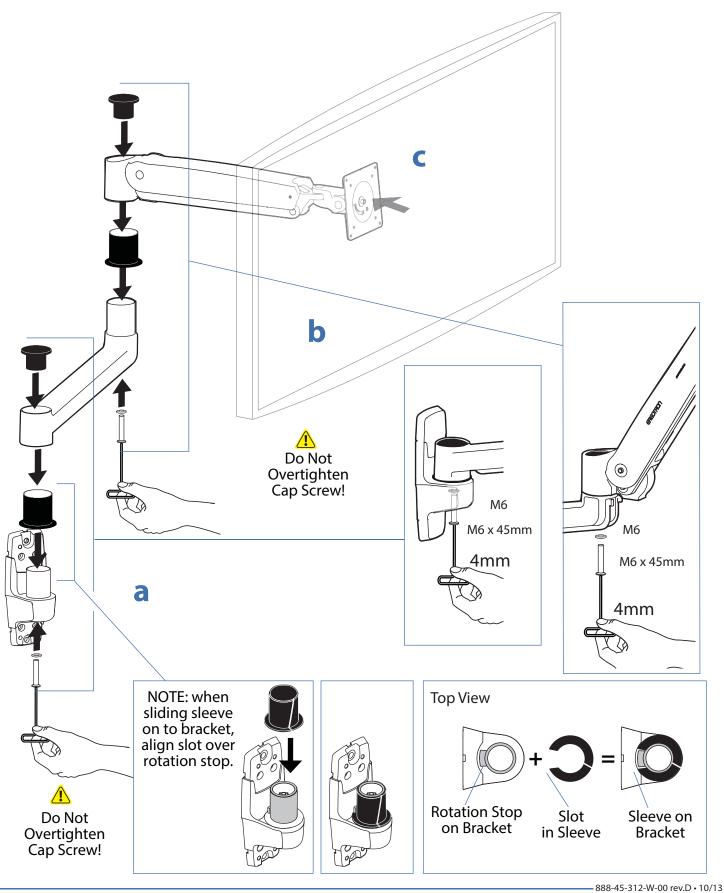


5 Portrait / Landscape Options


OPTION i If you want full portrait/landscape rotation, skip to step 8 on the next page.


OPTION ii If you do not want your TV/Monitor to rotate all all, you can stop rotation by inseting

the set screw.



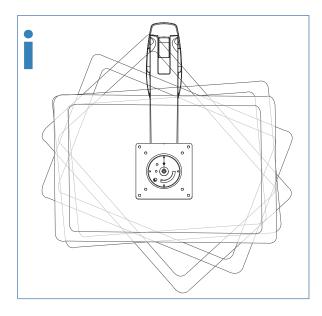

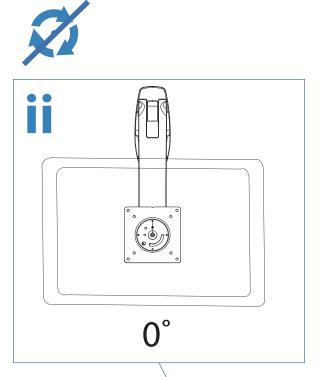

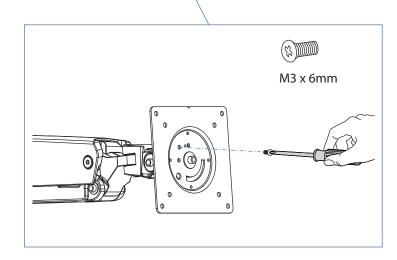





6 Check size of TV/Monitor hole pattern


TV/Monitor Hole Pattern Sizes


VESA Adapter Configurations

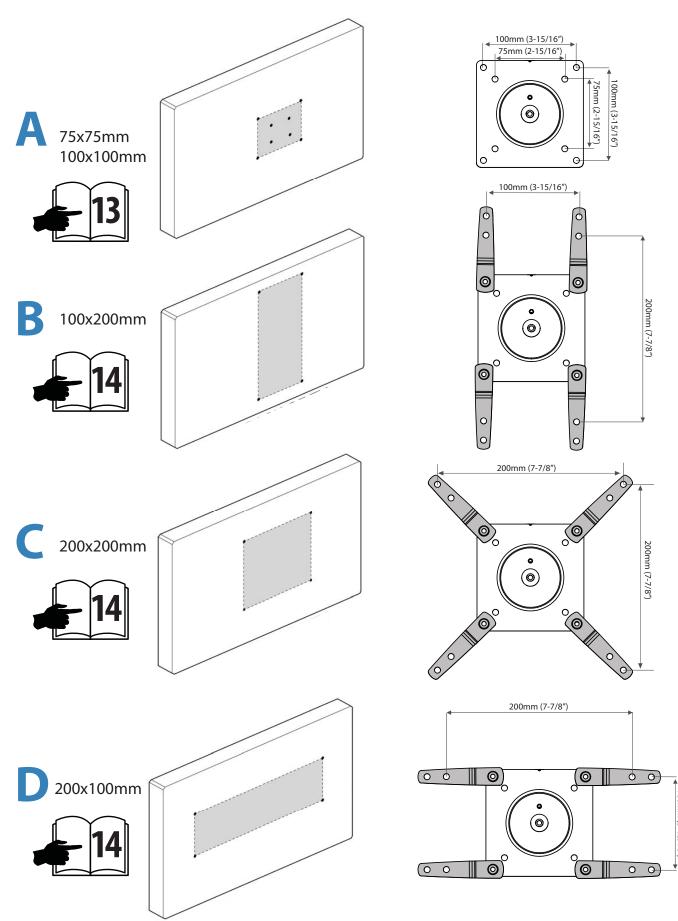


Mount Type A TV/Monitor to Arm

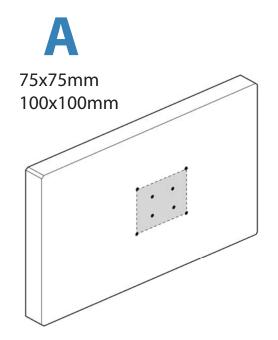


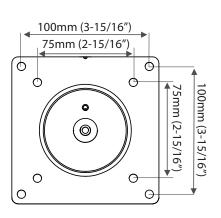


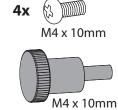

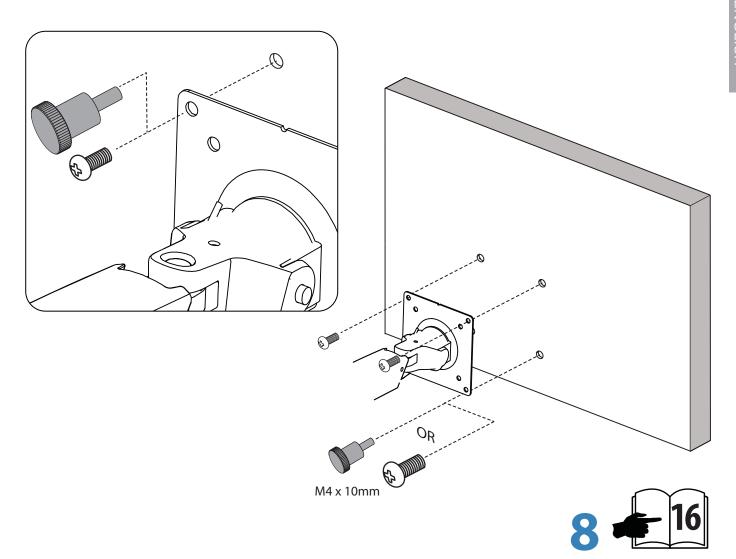



Mount VESA Adapters to Arm based on TV/Monitor hole pattern size (B, C, or D).

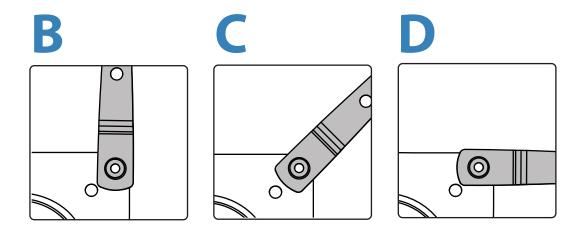


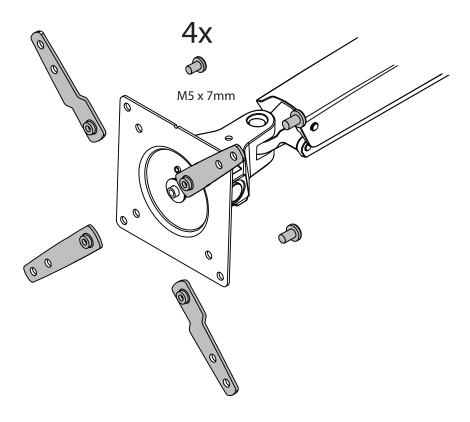


Mount Type B, C, or D TV/Monitor to Arm

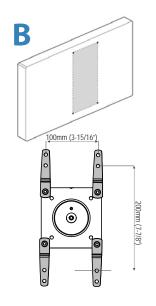

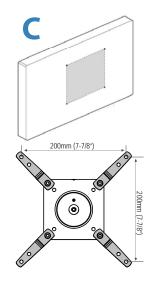

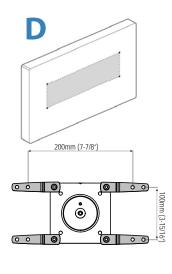


M5x12mm

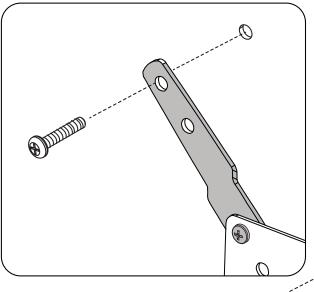

NOTE: To reduce M8 holes for use with M5 screws, or if you have a model with Samsung holder rings, follow the **M8M5 KIT** instructions

on the next page.



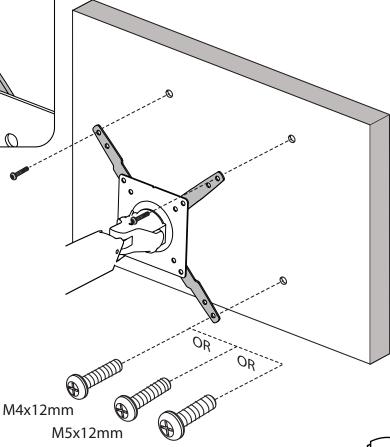


M6x12mm

M8M5 KIT Instructions

NOTE: follow this step only if your TV/monitor has M8 holes which need to be reduced to M5 or for Samsung models using the holder ring.


Install M8M5 reducer bushing to TV/Monitor and use M5 x 20 mm monitor screws to secure when using the Samsung holder ring.

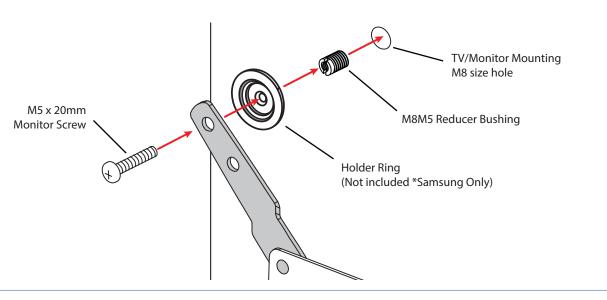



8 Attach top and bottom bracket covers

To remove covers:

- a) Wedge the blade of a flat screwdriver into the gap between the wall mount bracket and the cover. Rotate the blade upward to pry the cover away.
- b) Repeat on the opposite side of the wall mount bracket.
- c) Once the cover is free on both sides, lift it off.

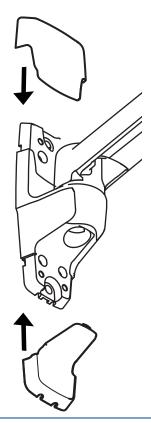

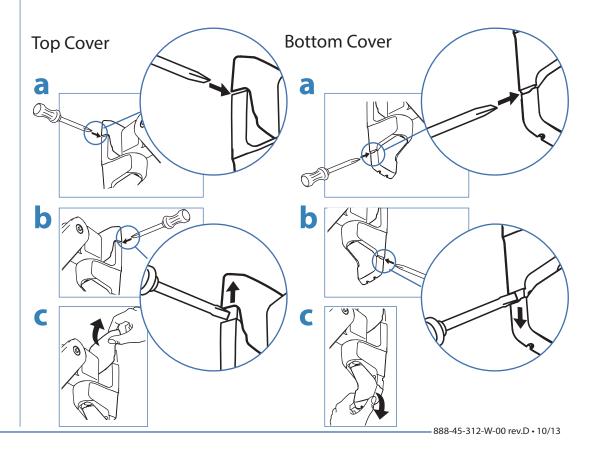

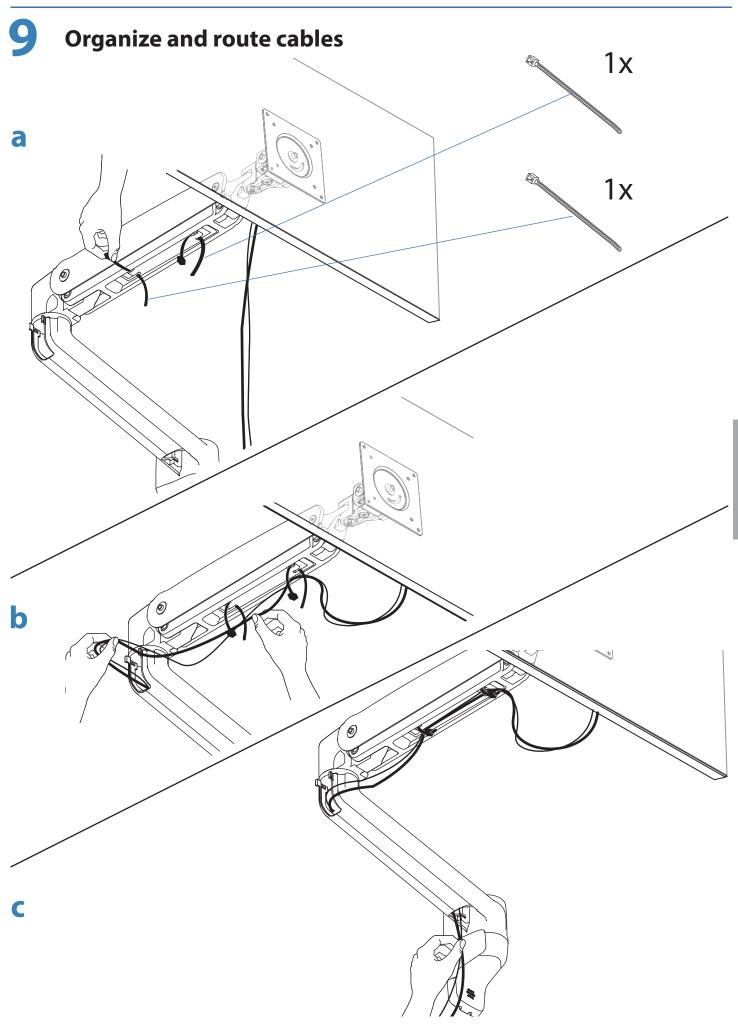




Adjustment Step


Important! You will need to adjust this product after installation is complete. Make sure all your equipment is properly installed on the product before attempting adjustments. This product should move smoothly and easily through the full range of motion and stay where you set it. If movements are too easy or difficult or if product does not stay in desired positions, follow the adjustment instructions to create smooth and easy movements. Depending on your product and the adjustment, it may take many turns to notice a difference. Any time equipment is added or removed from this product, resulting in a change in the weight of the mounted load, you should repeat these adjustment steps to ensure safe and optimum operation.



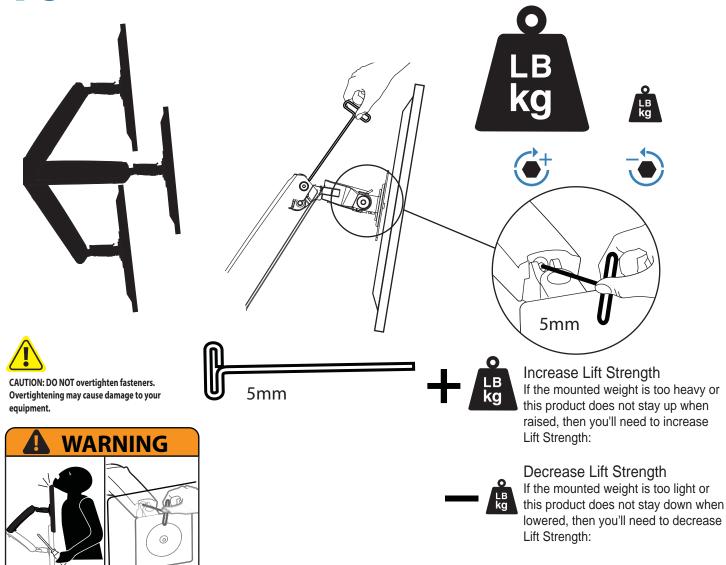

WARNING! Stored Energy Hazard: The arm mechanism is under tension and will move up rapidly, on its own, as soon as attached equipment is removed. For this reason, DO NOT remove equipment unless the arm has been moved to the highest position! Failure to follow this instruction may result in serious personal injury and/or equipment damage!


To adjust the TV/monitor tilt:

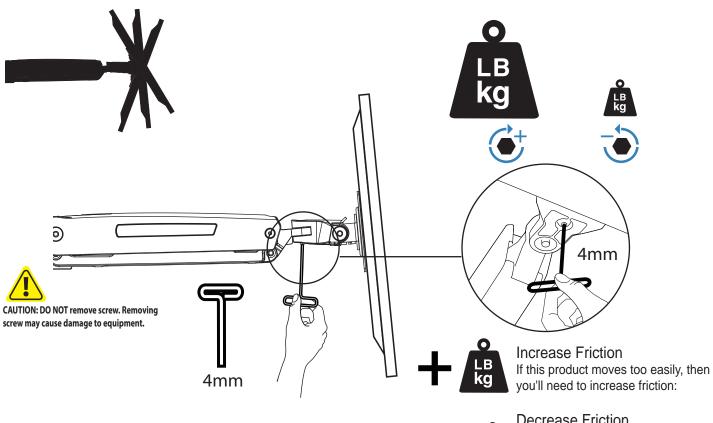

Decrease Friction

If this product is too difficult to move, then you'll need to decrease friction:

Set Your Workstation to Work For YOU!

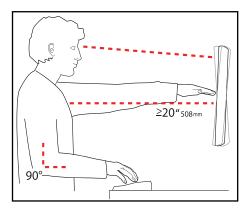

Learn more about ergonomic computer use at: www.computingcomfort.org

Height Position top of screen slightly below eye level.
Position keyboard at about elbow height with wrists flat.

Position keyboard at about elbow height with wrists flat.

Distance Position screen an arm's length from face—at least 20" (508mm).

Position keyboard close enough to create a 90° angle in elbow.

Angle Tilt screen to eliminate glare.

Tilt the keyboard back 10° so that your wrists remain flat.

To Reduce Fatigue
Breathe - Breathe deeply through your nose.
Blink - Blink often to avoid dry eyes.
Break - 2 to 3 minutes every 20 minutes
• 15 to 20 minutes every 2 hours.

For service and warranty visit www.ergotron.com

For local customer care phone numbers visit: http://contact.ergotron.com



© 2013 Ergotron, In All rights reserved.

While Ergotron, Inc. makes every effort to provide accurate and complete information on the installation and use of its products, it will not be held liable for any editorial errors or omissions (including those made in the process of translation from English to another language), or for incidental, special or consequential damages of any nature resulting from furnishing this instruction and performance of equipment in connection with this instruction. Ergotron, Inc. reserves the right to make changes in the product design and/or product documentation without notification to its users. For the most current product information, or to know if this document is available in languages other than those herein, please contact Ergotron. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise without the prior written consent of Ergotron, Inc., 1181 Trapp Road, Eagan, Minnesota, 55121, USA Patents Pending and Patented U.S.& Foreign, Ergotron is a registered trademark of Ergotron, Inc.

Americas Sales and Corporate Headquarters

EMEA Sales

St. Paul, MN USA (800) 888-8458 +1-651-681-7600 www.ergotron.com sales@ergotron.com Amersfoort, The Netherlands +31 33 45 45 600 www.ergotron.com info.eu@ergotron.com

APAC Sales

Worldwide OEM Sales

Tokyo, Japan www.ergotron.com apaccustomerservice@ergotron.com www.ergotron.com info.oem@ergotron.com